









About the case


NOTICE!

Assembling sequences and methods can vary depending on users. Product colors and parts may be subject to change in order to provide better quality products. Most edges inside of the computer case are finished in a manner as to prevent cuts on hands from the inner chassis; however, care should be taken of some parts that are not treated/finished to provide protection against cuts. You are advised to wear a pair of gloves during assembly that can protect your hands.

 M/B Standoff	Motherboard (6 Pre-installed)	 Screw - A	PSU Add-on VGA	 Screw - B	Motherboard, 5.25" Device, 2.5" SSD	 Screw - C	3.5" HDD
 Hand screw	3.5" HDD	 Buzzer	Motherboard Alarm	 Cable Tie	Cable Management	 Short Prevention Ring	Motherboard Screw

INSTALL THE MOTHERBOARD

M/B POSITION

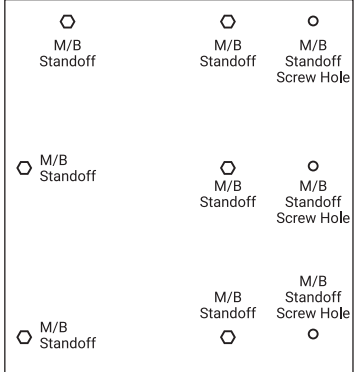


M/B SUPPORT

ATX

M-ATX

ITX

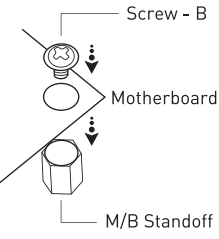


Screw - B


Motherboard

M/B Standoff

- Mount the mother board I/O shield at the rear of the case.
- Align the M/B standoff screws with their corresponding screw holes and tighten them with the screw-B bolts.
- The case comes basically with 6 M/B standoff screws, which can be adjusted to the specification of a main board.

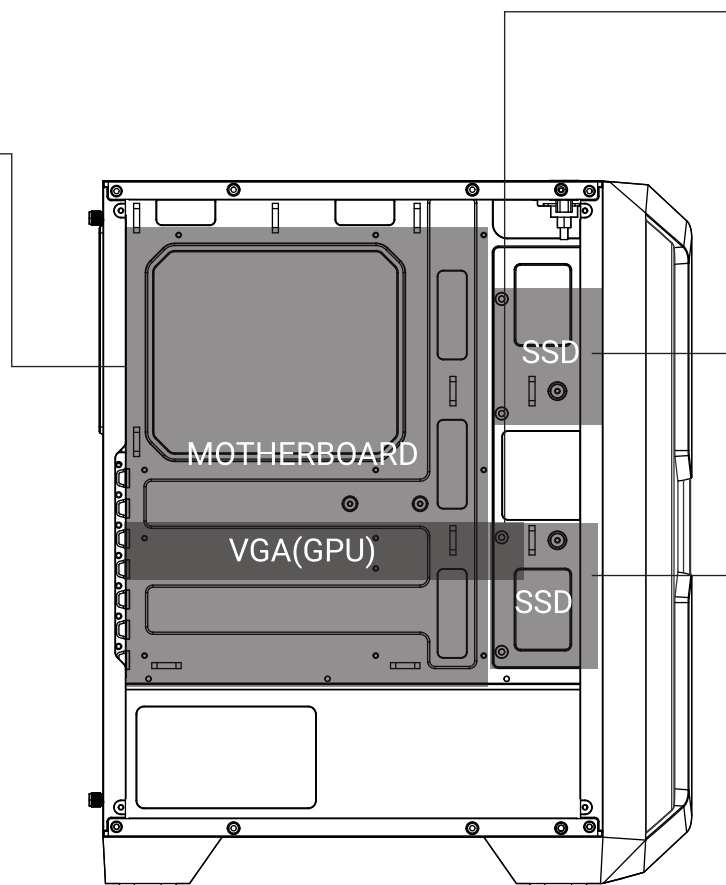


INSTALL THE VGA(GPU)

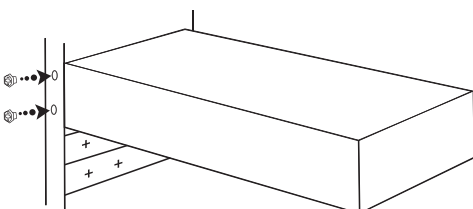

- Check for the location for mounting the graphic card and remove the PCI slot guide.
- Mount the card, aligning it accurately with the PCI slot.
- Use the supplied screw-A bolts to fix the graphic card in the PCI slot.

INSTALL THE SSD

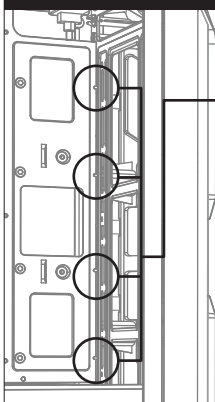









SSD FIXED SUPPORTER

- Check the position of the SSD screw holes in the SSD mounting space inside the chassis.
- Place the SSD fixed supporter on the right side SSD screw hole. Then, precisely position the bottom surface of the SSD in the designated screw hole, and assemble it using screw-B.


About the case

NOTICE!



Assembling sequences and methods can vary depending on users. Product colors and parts may be subject to change in order to provide better quality products. Most edges inside of the computer case are finished in a manner as to prevent cuts on hands from the inner chassis; however, care should be taken of some parts that are not treated/finished to provide protection against cuts. You are advised to wear a pair of gloves during assembly that can protect your hands.

 M/B Standoff	Motherboard (6 Pre-installed)	 Screw - A	PSU Add-on VGA	 Screw - B	Motherboard, 5.25" Device, 2.5" SSD	 Screw - C	3.5" HDD
 Hand screw	3.5" HDD	 Buzzer	Motherboard Alarm	 Cable Tie	Cable Management	 Short Prevention Ring	Motherboard Screw


HDD/SSD MULTI BAY

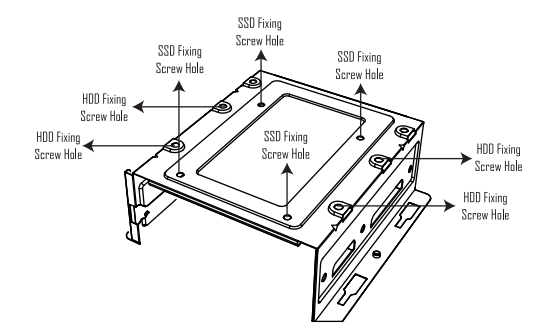


- After removing the screw from the bottom of the chassis, remove the HDD bay.
- Depending on the usage environment, 2 HDDs or 1 HDD + 1 SSD can be assembled.

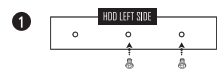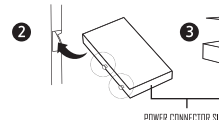- Check exclusive HDD screw (Screw-C).
- Assemble in two places by using the exclusive HDD screws on the left surface of the HDD.
- Attach by pushing the exclusive screw section onto the HDD installation rail on the left side of the HDD bay.
- Complete HDD assembly by using hand screws in the screw hole on the right after having attached it by accurately aligning it with the screw hole on the left and pushing it lightly.

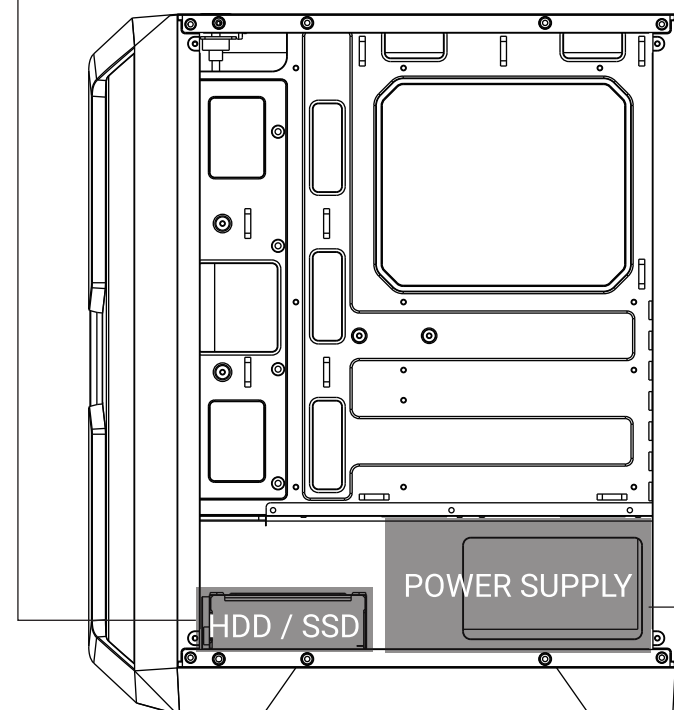

INSTALL THE POWER SUPPLY

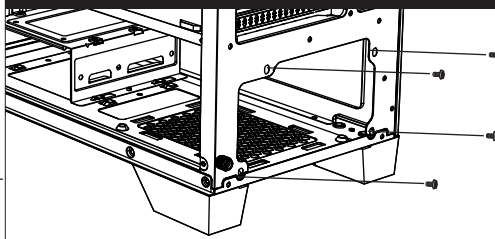

- Check the location of the power supply on the lower right side of the case.
- Position the fan on the bottom of the power supply and align it precisely with the rear screw hole.
- Tighten the power supply using the screw-A bolts.